



Installation Guide

WoodBeQuiet™



Contents

Preface	3
Peel & Stick Method	4
Adhesive Method	5





Wall Preparation

Before beginning the installation process, ensure that the wall is clean (free of any dust, flaking paint, loose debris or grime), structurally sound, dry and free of imperfections, to avoid compromising the adhesive strength.

Important Notes


When cutting and fitting planks to fit the space, consider which areas of the wall will contain the cut portions and try to apply the products as symmetrically as possible. It may help to measure and mark the space beforehand.

WoodBeQuiet™ Planks

Ensure that all Acoufelt WoodBeQuiet™ Planks are installed at the correct orientation as provided by the chosen Acoufelt plank pattern formation to avoid impacting the overall look of the finished installation.

Disclaimer

Acoufelt strives to fulfil the needs of their customers by producing the highest quality felt products. However due to the fine, fibrous and textural nature of the product, slight visual imperfections may be seen when viewing the product from less than 1 to 1.5 meters. These slight visual imperfections however, are within normal industry manufacturing tolerances.

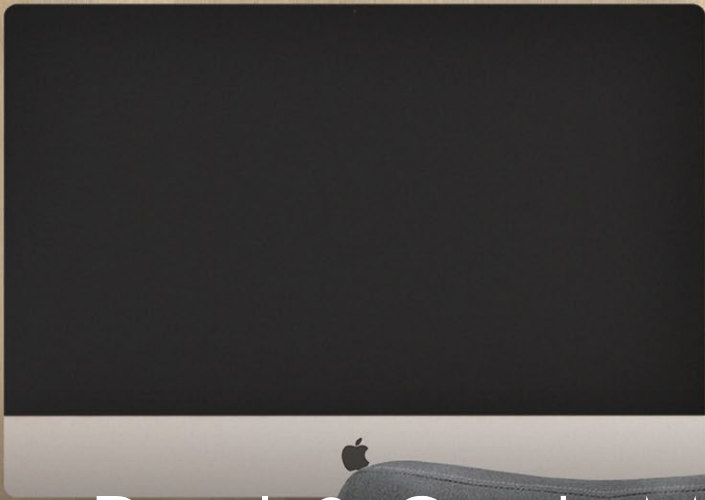

Peel & Stick Method


Tools & materials required:

- Clean gloves
- Utility knife
- Straight edge
- Measuring tape
- Bar level

Ordered with products:

- Roller

Plank Pattern Formation

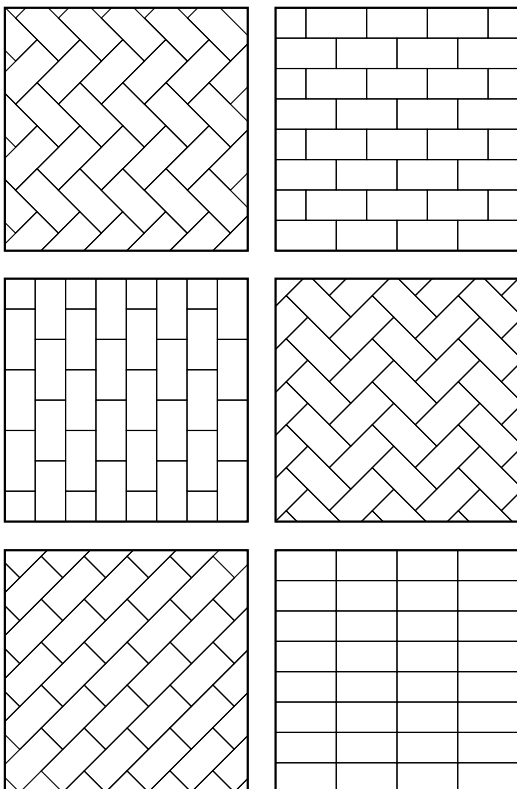

Steps: For Peel & Stick Method

1. Wear clean white gloves throughout the installation process. Use matching caulk available at a local resource to fill in any unwanted cracks.
2. After preparing the wall or ceiling for installation, use the bar level to dry fit (without adhesive) the planks to the surface at the desired pattern, either starting from the bottom or middle. Note: preferably start from the bottom for an easy install.
3. Measure the desired planks formation on the wall or ceiling using the bar level and ensure they line up according to the required design/layout. If required, use the utility knife and the straight edge to accurately cut the planks to the appropriate dimensions.
4. Peel off the adhesive cover and accurately, place the plank on the desired layout "mark outs". Apply gentle downward pressure to the top of the plank to make sure the edges are properly butted together.
5. Apply even pressure with the roller and firmly press all areas of the planks to the wall or ceiling. Repeat this process for all planks until the installation is complete.
6. Trim off any excess material around joins, pipes, sockets etc.

Note

- To avoid faulty installation and weak bond strength to the installation surface, it is imperative to use the roller to firmly secure each plank in place for a successful and long-lasting installation.
- For additional bonding strength, a construction adhesive may be used but special attention must be made to ensuring the adhesive is evenly and thinly spread to minimise the space behind, to allow for a flush finish of the product across the wall or ceiling.

acoufelt
making quiet

acoufelt.com