



Installation Guide

WoodBeQuiet™



Contents

Preface	3
Installation	4





Preface

WoodBeQuiet™

WoodBeQuiet™ Planks feature a bonding resin that is pressure sensitive. To avoid faulty installation and weak bond strength, follow this guide to ensure maximum adhesion across the wall or ceiling surface.

It is not recommended that the planks are repositioned or removed from the surface after install as this will reduce the effectiveness of the adhesion.

Wall Preparation

Before installation, inspect the surface and ensure the area is suitable for application. The surface must be flat, dry and clean. Ensure the surface is clean and free of any dust, flaking paint, loose debris or grime, is structurally sound and free of imperfections.

Fill any unwanted cracks and ensure the surface is fully dry. Check for any high spots that require levelling as this will impede the ability for the plank adhesion to work effectively.

Concrete or plastered walls must be prepared with a primer and allowed to fully dry prior to installation.

Important Notes

When cutting and fitting planks to fit a surface, consider which areas of the surface will contain the cut portions and try to apply the products as symmetrically as possible. It may help to use a chalkline to establish and mark out the space before applying the product.


WoodBeQuiet™ Planks

Ensure that all Acoufelt WoodBeQuiet™ Planks are installed at the correct orientation as per the selected Acoufelt Plank Pattern Formation (pg. 4) to avoid an incorrect panel finish.

Disclaimer

Acoufelt strives to fulfil the needs of its customers by producing the highest quality felt products. However due to the fine, fibrous and textural nature of the product, slight visual imperfections may be seen when viewing the product from less than 1 to 1.5 meters. These slight visual imperfections, however, are within normal industry manufacturing tolerances.


Installation guidelines and methods must be adhered to to ensure that the product warranty is not void.

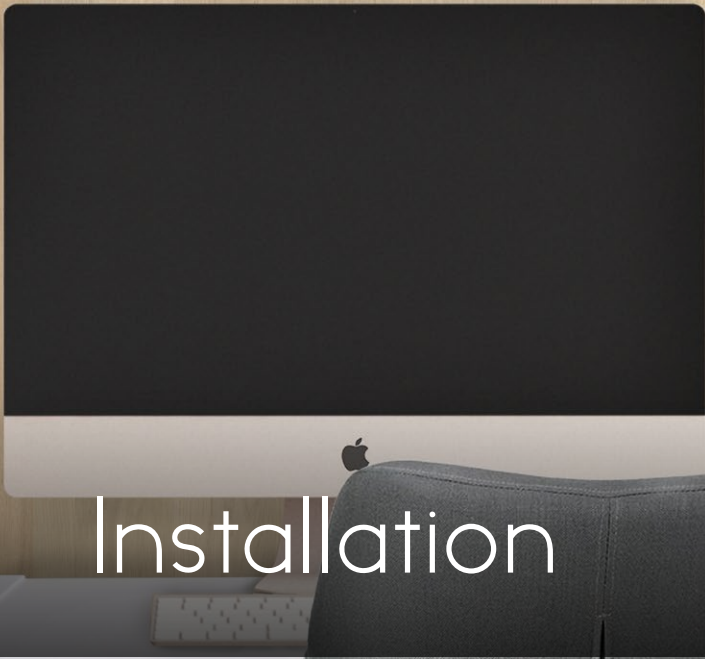

Installation

TOOLS REQUIRED

- Roller
- Clean gloves (provided)
- Utility knife
- Straight edge
- Measuring tape
- Spirit Level
- Adhesive spray (See 'Note' below for recommended brand)

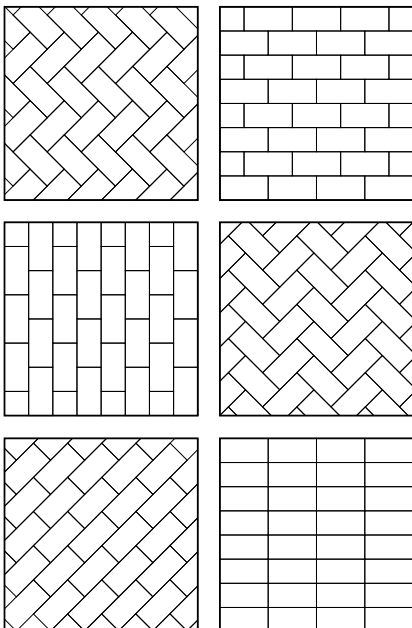

Plank Pattern Formation

APPLICATION

1. Wear gloves when handling the product.
2. Starting from a low and centralised area of the surface, carefully dry fit the first row of WoodBeQuiet™ planks to determine the direction and number of planks required for the desired pattern or finish. Use a measuring tape to mark out the selected plank formation on the surface. Use the spirit level to mark up the horizontal and vertical lines and use the straight edge to check they are straight and match up accordingly. Use the utility knife and straight edge to carefully cut the plank to the appropriate dimension.
3. Prime the designated section of the wall or ceiling surface using your panel adhesive. Once primed, leave the surface for 5 minutes or until fully dry.
4. Peel off the adhesive cover and carefully place the plank onto the surface. Apply firm pressure across the plank and hold for 5 seconds, and then use the roller to apply pressure across the plank. Use the Roller across the row of planks and apply even pressure.
5. When applying successive rows, apply an even downwards pressure to the top of the plank below to make sure the edges are properly butted together.
6. Trim off any excess material around joins, pipes and sockets.
7. Once the install has been completed, roll over the whole surface with the roller for maximum adhesion. Always roll from the centre to the edge.

Note

- To avoid faulty installation and weak bond strength, it is imperative to use the roller to firmly secure each plank in place. Failure to do this could result in movement or lifting of the planks.
- Acoufelt recommends using TensorGrip X40 Acoustic Panel Adhesive for priming. 1 x 550ml canister of adhesive should be adequate to cover a surface area of approximately 6m².

acoufelt
making quiet

acoufelt.com